



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS


Bridging Unit



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Bridging Unit

Bridging Unit Parts

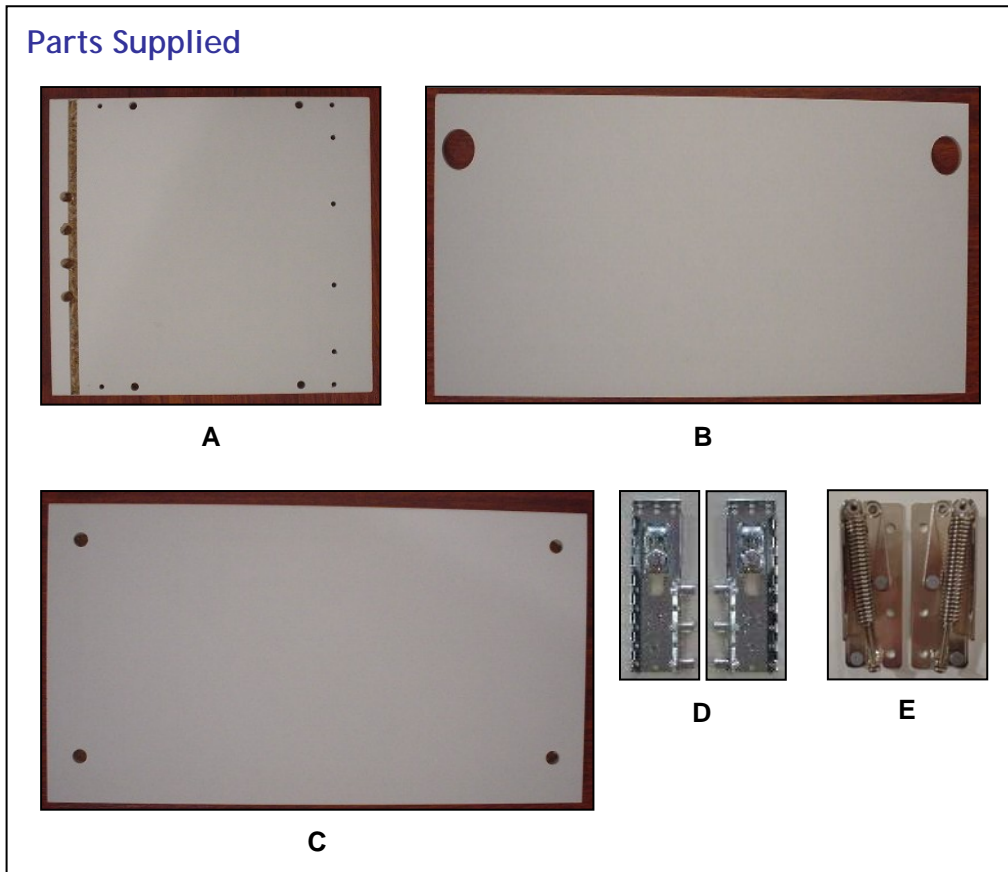



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS
























Bridging Unit

Part Letter	Part Name	Quantity
A	End Panel	2
B	Back Panel	1
C	Top/Bottom Panel	2
D	Hanging Bracket	1 pair
E	Flap Hinge Stay	1 pair



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Bridging Unit
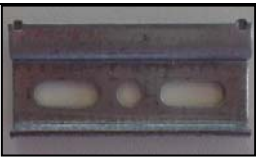
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>J</p> 	<p>K</p> 
<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>P</p> 	<p>Q</p> 
<p>R</p> 	<p>S</p> 	<p>T</p> 	<p>U</p> 	
<p>V</p> 	<p>X</p> 		<p>Y</p> 	
<p>W</p> 				



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Bridging Unit

Fitting Letter	Fitting Name	Quantity
A	Metal Dowel	8
B	Metal Cam	8
C	Wooden Dowel 8 x 40mm	8
D	Wooden Dowel 5 x 25mm	
E	Connecting Screws (M/F)	2 pairs
F	Black Chipboard Screw 8 x 45mm	
G	Countersunk Screw 8 x 1 ¼"	
H	Countersunk Screw 6 x 5/8"	
J	Countersunk Screw 6 x ½"	
K	Flange Head Screw 6 x ¾"	4
L	Flange Head Screw 6 x 5/8"	4
M	Euro Screw 6 x 11mm	4
N	Round Head Screw 6 x 5/8"	
P	Shelf Stud	
Q	Rubber Sleeved Shelf Stud	
R	Angle Bracket	
S	Door Buffer Pad	2
T	5mm Plugs	4
U	35mm Bung	2
V	Crown Conceal Cap	
W	Hanging Plate	2
X	Plinth Clip	
Y	Peg-o-Lock	



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Bridging Unit

Assembly Instructions

Step 1. Insert fittings into End Panels

Insert Metal Dowels (fitting A) and Wooden Dowels (fitting C) into the end panel, as shown.


Bridging Units have handed ends.

NOTE: Hanging Bracket holes and Hinge Stays to top edge.

1.1. Insert fittings A and C



1.2. Positions of fittings A and C on End Panels

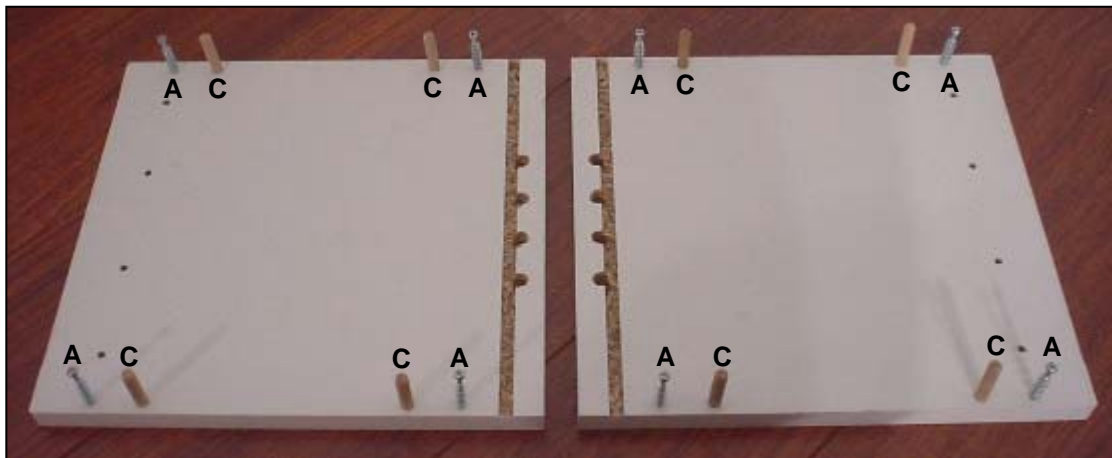


Step 2. Top/Bottom Panel

Insert the Circular Cams (fitting B) into the holes in the top panel.


Ensure the arrows on the circular cams, are pointing outwards, towards the pre-drilled edge.

Repeat for the bottom panel.

2.1. Insert fitting B

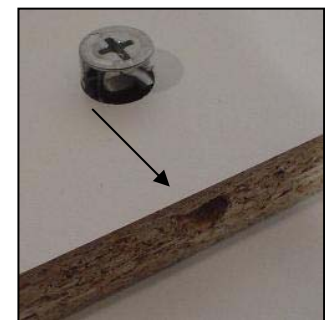

2.2. Position of fitting B in Top/Bottom Panels

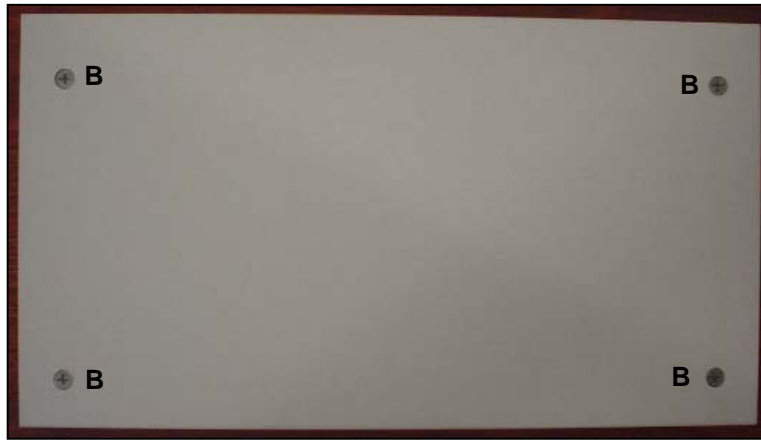


Step 3. Fit Top and Bottom Panels

Step 3.1

Take the top panel and push firmly home onto the end panel, as shown.

Ensure the cams are facing outwards.

3.1. Fit Top Panel to End Panel

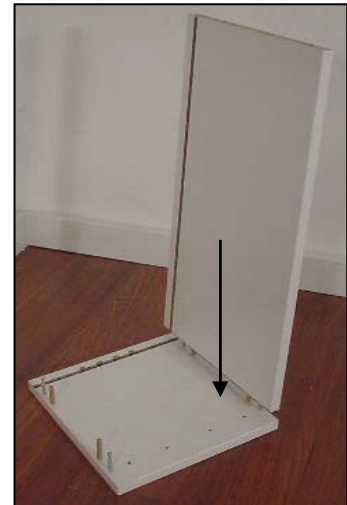


Step 3.2

Using a screwdriver, turn the circular cam clockwise to lock.

Repeat for all cams.

3.2. Lock Cams to secure

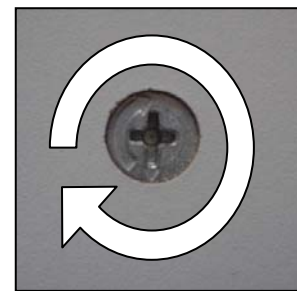

Step 3.3

Repeat the above, to fix the bottom panel.



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Bridging Unit


3.3 Repeat to attach Bottom Panel



Step 4. Fit Back Panel

Slide the back panel, into the grooves located on the top, bottom and end panels.

4.1. Fit Back Panel

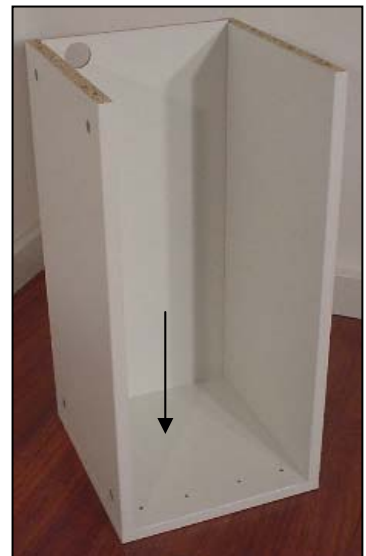



CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Bridging Unit

Step 5. Fit remaining End Panel

Fit the remaining end panel to the unit.

Lock all cams.

5.1. Fit remaining End Panel



Step 6. Fitting Hanging Brackets

Step 6.1

Push the hanging bracket into the pre-drilled holes, located on the back of the end panel, as shown.

6.1. Insert hanging bracket



Step 6.2

Secure the hanging bracket, using two screws (fitting M), fixing into the top panel through the pre-drilled holes located at the top of the hanging bracket.

6.2. Fix hanging bracket



Step 6.3

Repeat this, to attach each hanging bracket to the unit.

6.3. Back of Cabinet with Hanging Brackets




Step 6.4 Adjustment Mechanism

Now look inside the cabinet. Located in the holes found in the back panel are two adjustment mechanisms.

- Upper hanging bracket screw for height adjustment,
- Lower screw for pulling the cabinet tight into the wall.

6.4.

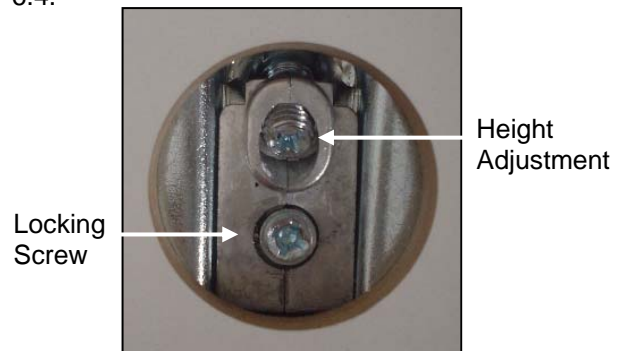

Step 7. Fitting Flap Hinge Stay Mechanisms

NOTE: There is a Left and Right flap hinge stay.

Attach each Flap Hinge, to the inside top of the cabinet.

Secure using two euro screws (fitting K), using the top two holes on the flap hinge.

7.1. Fit Flap Hinge Stay





CROWN IMPERIAL ASSEMBLY INSTRUCTIONS

Bridging Unit

7.2. A pair of Flap Hinge Stay's fixed to the Cabinet



Complete Bridging Unit

